 
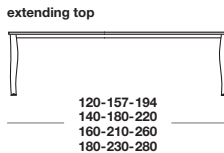 
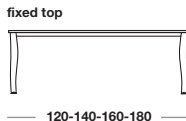 
 


Diapason

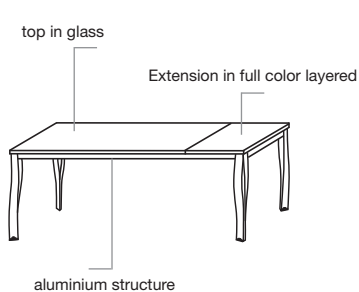

Fixed top

L 120 **P** 80 **H** 75,5
L 140 **P** 80 **H** 75,5
L 160 **P** 90 **H** 75,5
L 180 **P** 90 **H** 75,5

Extending top

L 120/157/194 **P** 80 **H** 75,5
L 140/180/220 **P** 80 **H** 75,5
L 160/210/260 **P** 90 **H** 75,5
L 180/230/280 **P** 90 **H** 75,5

H (under table) 68

Instructions for use

Use and maintenance

The item is for indoor use. Please follow these guidelines: do not stand and do not sit on the glasstop and do not knock against the top. To move it, please catch on metal structure. Do not carry out maintenance to the components and contact the dealer for all requirements.

Maintenance for metal parts

These item can be cleaned with neutral detergents and immediately dried. Do not use products which contain acetone, ammonia, chloride, solvents, abrasive products and furniture wax.

Maintenance for glasstop

These parts may be cleaned with a specific product or with water and must be immediately dried with a soft cloth in order to avoid scratches.

Maintenance for layered extension

Clean with a damp soft cloth and neutral detergents which don't contain abrasives or acids. Dried immediately with a soft cloth

Ecology

At the end of the use, do not disperse the item into the environment, but refer to local waste disposal.